




Pre-install considerations

- T4 Borg & Overström Tap requires minimal space above the countertop.
- Fitted in the countertop over its own purpose built font.
- Ensure there is undercounter space available, as detailed on following pages.
- Power and other requirements may differ by configuration. Consult icons on each setup.

Icons explained


Look out for the below icons on the following pages that detail install requirements per setup.

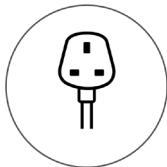

Plugs required, and if they need to go above or below counter.



Water fitting type as well as required pressure range.

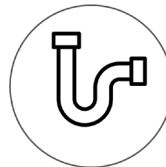


Waste options and requirements for the setup.



Filters required for the machine (installed undercounter).

T4 dimensions

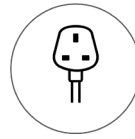

1 x plug required below the counter



Requires 1 x Borg & Overström ProCore unit




$\frac{3}{4}$ " BSP with a pressure range of 0.5 - 10 bar



1 $\frac{1}{2}$ " upstand or sink spigot for waste

Undercounter space required

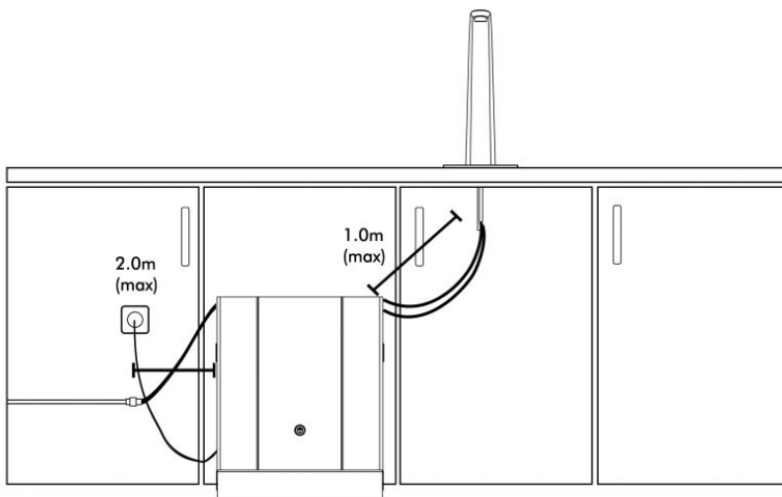


Minimum space for **all equipment** under the counter is a 500 mm kitchen unit, with the full height allowance (no drawer).

View diagram (left) to see what the ideal installation of the T4 and undercounter system should look like when in place.

ProCore undercounter unit max dimensions:

320 x 471 x 400 mm

Surface cut guide for T4 Borg & Overström tap and font

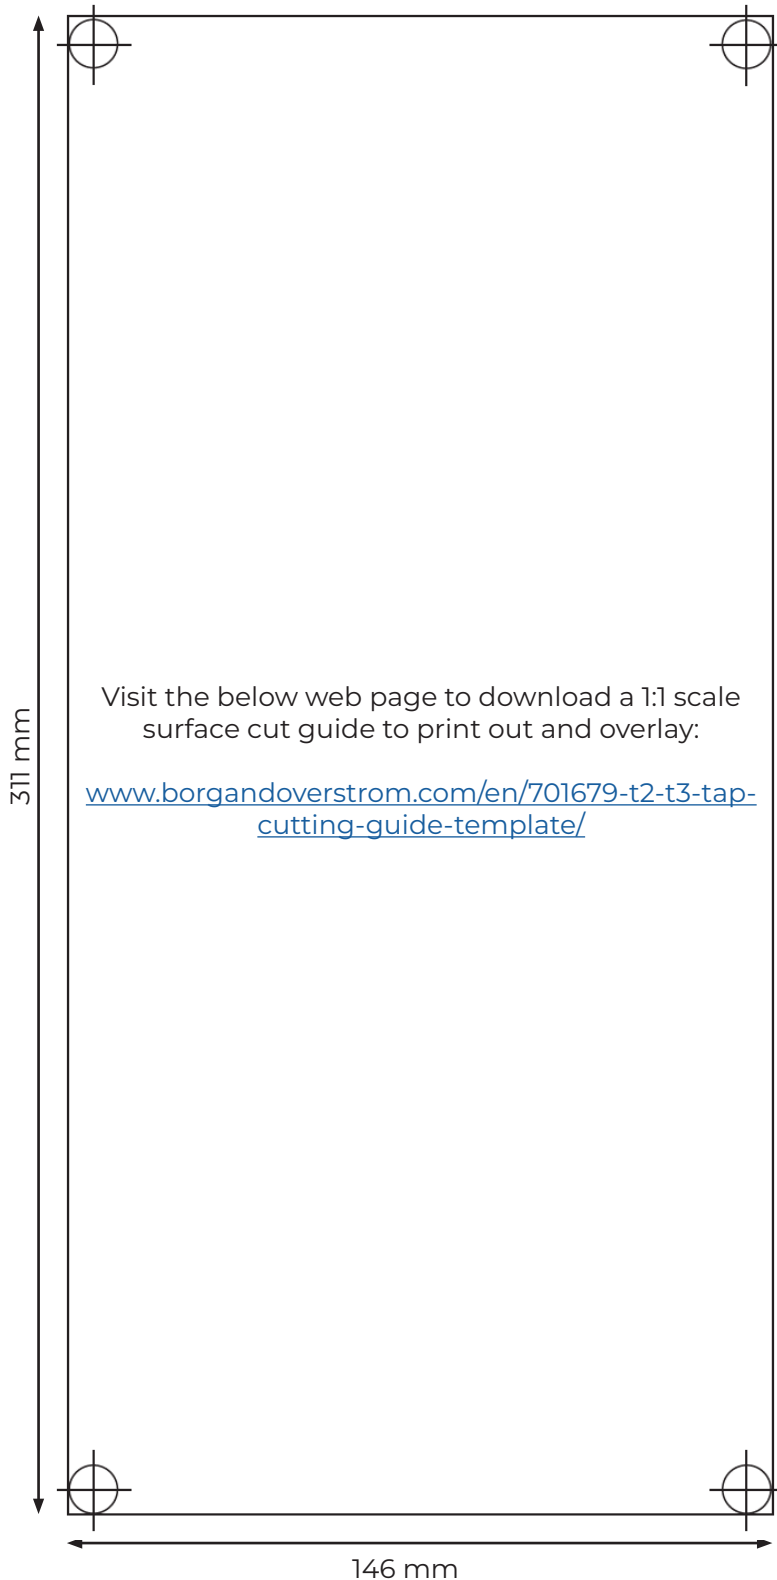

Tap sits within the font, which requires a cut in your worktop which is **311 x 146 mm**.

See diagram on the left for further install information.

Visit the below web page to download a 1:1 scale surface cut guide to print out and overlay:

www.borgandoverstrom.com/en/701679-t2-t3-tap-cutting-guide-template/