




### Pre-install considerations

- Borg & Overström T1 Tap requires minimal space above the countertop.
- Can be fitted over an existing sink, or with a purpose built font.
- Ensure there is undercounter space available, as detailed on following pages.
- Power and other requirements may differ by configuration. Consult icons on each setup.

### Icons explained

Look out for the below icons on the following pages that detail install requirements per setup.

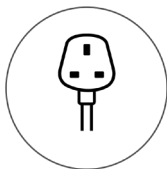


Plugs required, and if they need to go above or below counter.



Water fitting type as well as required pressure range.



Waste options and requirements for the setup.

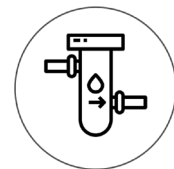


Filters required for the machine (installed undercounter).

# T1 – Borg & Overström T1

## Area prep guide

Page 2 of 3  
Date version 17.07.2023

### T1 dimensions

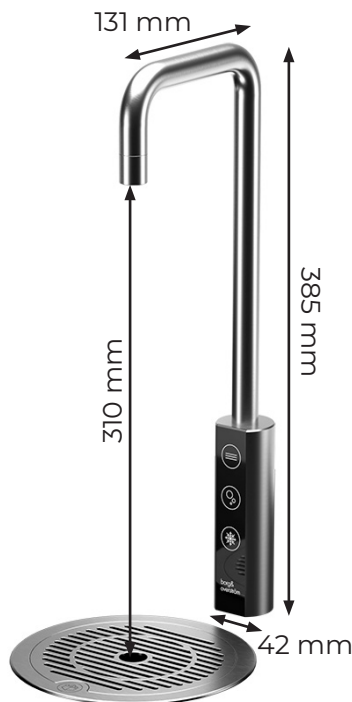

1 x plug required below the counter



Requires 1 x Borg & Overström ProCore unit




3/4" BSP with a pressure range of 0.5 - 10 bar



1 1/2" upstand or sink spigot for waste

### Undercounter space required

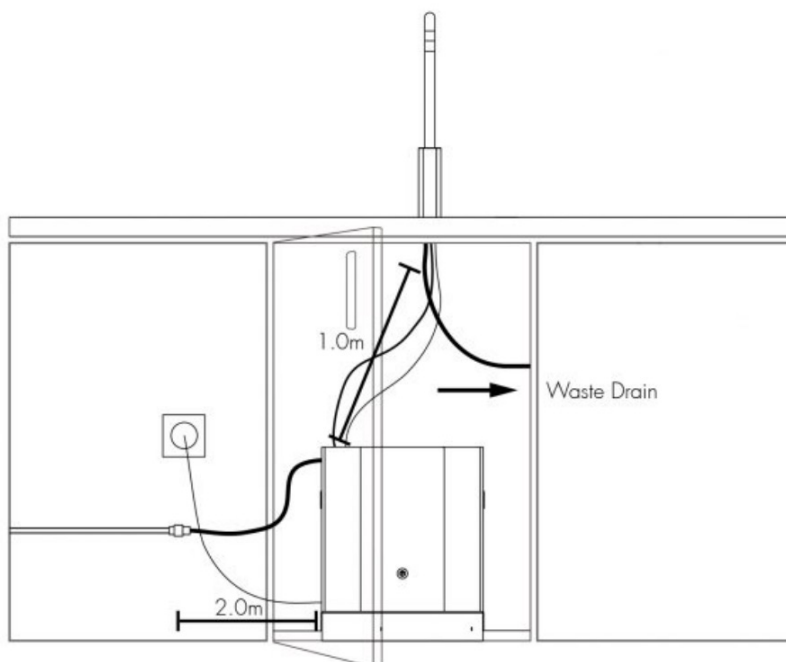

Minimum space for **all equipment** under the counter is a 500 mm kitchen unit, with the full height allowance (no drawer).

View diagram (left) to see what the ideal installation of the T1 and undercounter system should look like when in place.

ProCore undercounter unit max dimensions:

**320 x 431 x 375 mm**

### Surface cut guide for tap and font

Tap requires **35 mm** diameter hole in work top. If installed alongside the font, ensure the centre of each cut is **131 mm** apart.

