




Pre-install considerations

- T4 Borg & Overström Tap requires **minimal space** above the countertop.
- Fitted in the countertop over its own purpose built font.
- Ensure there is undercounter space available, as detailed on following pages.
- Power and other requirements may differ by configuration. Consult icons on each setup.

Icons explained


Look out for the below icons on the following pages that detail install requirements per setup.

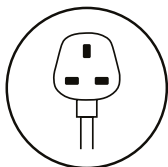


Plugs required, and if they need to go above or below counter.



Water fitting type as well as required pressure range.

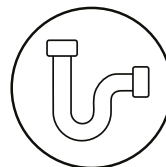

Waste options and requirements for the setup.

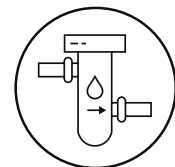

Filters required for the machine (installed undercounter).

T4 - Borg & Overström

Area prep guide

Page: 2 of 5
Date version: 16/05/2025

T4 dimensions




T4 dimensions (Monofit)



Requirements


The below details the install requirements per setup for the T4 Borg & Overström.

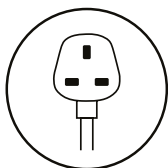


1 x plug required
below the counter.



3/4" BSP with a pressure
range of 0.5 - 10 bar.

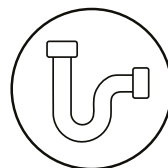


1 1/2" upstand or sink
spigot for waste.

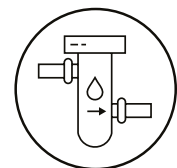

Requires 1 x Borg &
Overström ProCore unit.

Undercounter space required

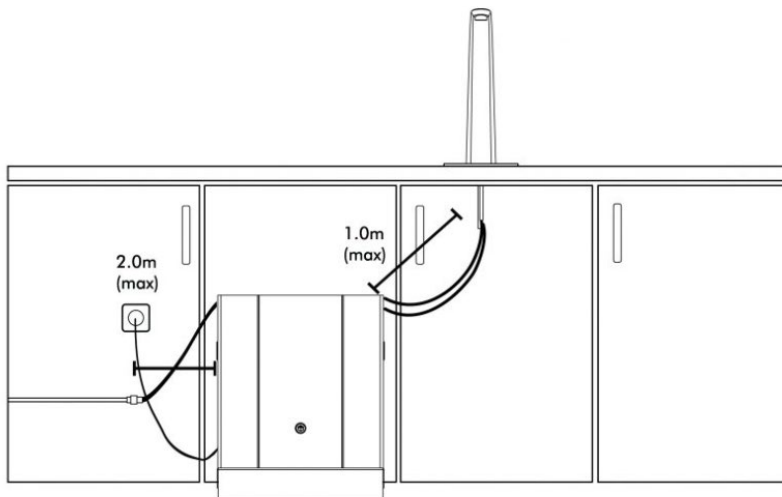

Minimum space for all equipment under the counter is a 500 mm kitchen unit, with the full height allowance (no drawer).


View diagram (left) to see what the ideal installation of the T4 and undercounter system should look like when in place.

ProCore undercounter unit max dimensions:

320 x 471 x 400 mm



Surface cut guide for T4 Borg & Overström tap and font

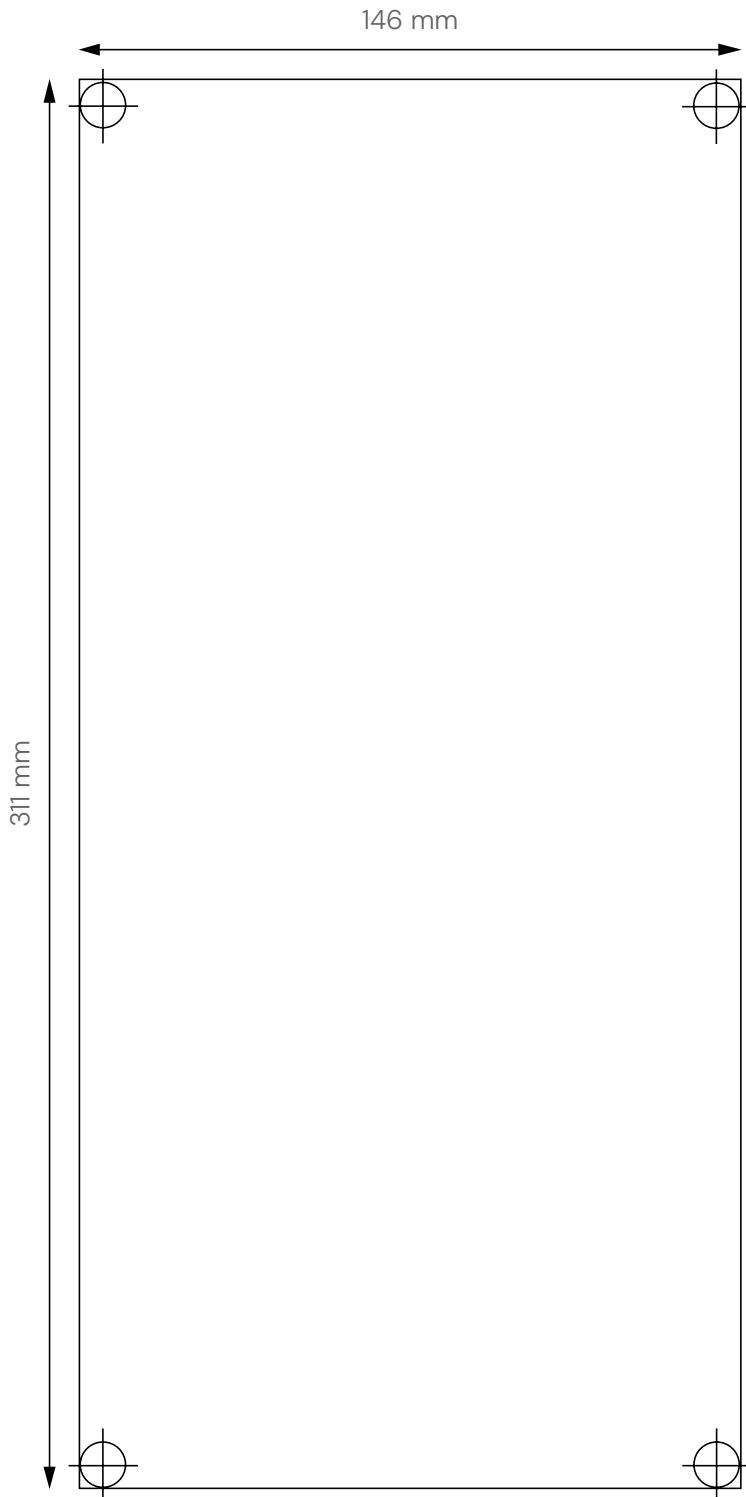


Tap sits within the font, which requires a cut in your worktop which is 311 x 146 mm.

See diagram on the left for further install information.

Click [here](#) to download a 1:1 scale surface cut guide to print out and overlay.

Surface cut guide for T4 Borg & Overström Monofit

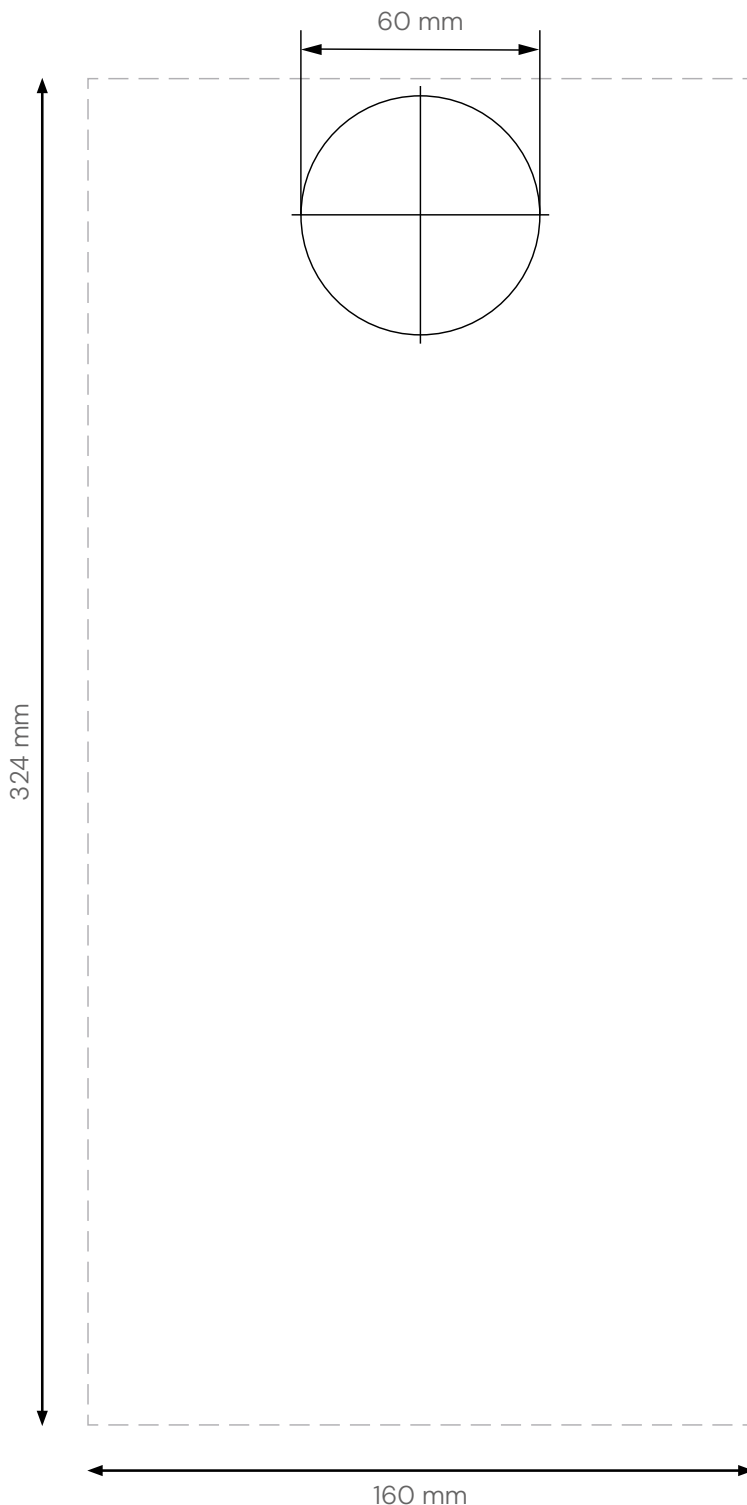

The Monofit variant of this tap only requires a 60 mm hole drilled into a worktop. The dotted line to the left represents how the raised font will sit in relation to the hole.

See diagram on the left for further install information.

Click [here](#) to download a 1:1 scale surface cut guide to print out and overlay.